

RC-010



Owner's Manual

All rights reserved. No part of this publication may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form, or by any means (electronic, mechanical, photocopying, recording or otherwise) without the prior written permission of Vitus Audio. Any person who does any unauthorized act in relation to this publication may be liable to criminal prosecution and civil claims for damages.

Information contained in this manual is subject to change without notice, and whilst it is checked for accuracy, no liabilities can be accepted for errors.

table of contents

introduction

Foreword	4
About this manual	4

1. getting started

RC-010 System Remote	5
--------------------------------	---

2. operation

Shipping mode	7
RC-010 System Remote operation modes	8
The menu structure	13
RC-010 Discription of the elements in the menu.	14
RC-010 The menu structure	15

3. operation & service

Mains supply voltage	16
Maintenance	16

4. warranty

Warranty	17
--------------------	----

5. specifications

RC-010 specifications	20
RC-010 masurements	21
RC-010 The functions of the buttons	22
The RC 5 codes for the remote.	25

6. examples operation

Examples Signature	32
Example 1.	32
Example 2.1.	33
Example 2.2.	34
Example 2.3.	35
Example 3.	36
Example 4.	37
Example 5.	38
Example 6.	39

Example 7.	40
Examples Masterpiece.	42
Example 1.	43
Example 2.	44
Example 2.1.	44
Example 2.2.	45
Example 2.3.	46
Example 2.4.	47
Example 2.5.	48
Example 3.	49
Example 4.	50
Example 5.	51
Example 6.	52
Example 7.	53

7. pictures

RC-010 Picture	55
--------------------------	----

introduction

Foreword

First of all, thank you for choosing the Vitus Audio RC-010 system remote.

This is the RC-010. The RC-010 is the Vitus Audio System Remote that comes standard with the SIA-025. The RC-010 uses an infrared sensor and communicates with the products using the RC5-protocol. It comes with pre-installed functions for communication with Vitus Audio products. With the RC-010 you can control all Vitus Audio products in the Signature and Masterpiece series.

About this manual

This is your RC-010 owner's manual. The following pages will describe, as clearly as possible, how to get your RC-010 operating fast and simple. Although some operations are self-explanatory, we strongly suggest you read this manual to avoid any damage to the unit. The manual is designed to be helpful. If there are points you feel we could cover better, or that we have missed out – please tell us.



 
Important information is presented like this. Ignoring this information may cause damage to you or the unit. Damage caused to the unit by ignoring this information might invalidate the warranty.

1. getting started

RC-010 System Remote

This is the RC-010. The RC-010 is the Vitus Audio System Remote that comes standard with the MP-L201. The RC-010 uses an infrared sensor and communicates with the products using the RC5-protocol. It comes with pre-installed functions for communication with Vitus Audio products. With the RC-010 you can control all Vitus Audio products in the Signature and Masterpiece series. The RC-010 has an internal battery, that can be charged with the loader that is included. The RC-010 has an automatic standby function. This is to ensure that the battery lasts as long as possible on one charge

The RC-010 has two hotkeys, buttons 1 and 3. With these hotkeys you can jump to another product without scrolling through the list of products. The remote automatically forwards volume up and volume down commands to the product under hotkey 2.

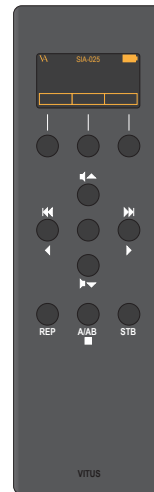

RC-010
System Remote



AC/DC
Adapter

Adapter
Power Cord

The AC/DC Adapter is a switchmode adapter that works with every Voltage between 100 and 240 Volt.

2. operation

Shipping mode

The RC-010 is put into shipping mode before transport. This means that the motion sensor is disabled.

Shipping mode is disabled by pushing any button.

When you are going to transport the RC-010 you have to put the RC-010 into shipping mode.

Putting the RC-010 into shipping mode.

1. Press and hold buttons (2+3) + (9+10).

The display now shows SHIP MODE and thereafter LEAVE MENU.

2. Press button 6 (select). The RC-010 is now in shipping mode.



2 . operation

RC-010 System Remote operation modes

The RC-010 has 4 operation modes

1. Normal mode.

This is the mode you use when listening to music.

2. Menu mode

In this mode you can alter the settings of the RC-010.

3. Standby mode.

In this mode the controls of the RC-010 are deactivated.

4. Flight mode

In this mode the controls of the RC-010 are deactivated. The motion sensor is deactivated so the RC-010 cannot be woken up by movement. Exit flight mode by pressing any button.

2. operation

Normal mode

Buttons

In normal mode there are 11 basic functions/buttons available on the left front.

1. Hotkey*
2. Switch between products.
Enter menu mode.
3. Hotkey.*
4. Volume up
5. Previous input
6. Mute
7. Next input
8. Volume down
9. -
10. Change class
11. Standby

*A hotkey is a button that can be programmed by the user.



Normal mode

Display

In normal mode the display has 6 information fields.

- a. VA logo
- b. The device that the RC-010 is controlling now.
- c. Battery status
- d. Hotkey standard set to be a shortcut to the MP-T201.
- e. Change the device that the RC-010 has to control.
- f. Hotkey standard set to be a shortcut to INPUT2.

2. operation

Menu mode

Buttons

You enter menu mode, by holding button 2 down for three seconds.

In menu mode there are 8 basic functions/buttons available on the left front.

1. Edit hotkey *
2. Select between products
3. Edit hotkey *
4. Next/Up
5. Previous/Down
6. Select
7. Next/Up
8. Previous/Down
9. -
10. -
11. -

*only available in the EDIT PRODUCT sub-menu.




Menu mode

Display


In the menu mode the display has 2 different layouts and available.

 Layout 1

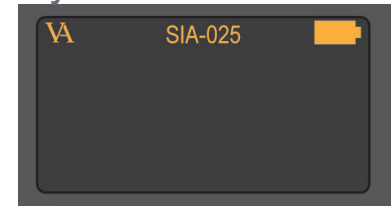

The display layout for the sub-menus: LEAVE, FABRIK, ADD PRODUCT and DISPLAY.

 
Layout 2

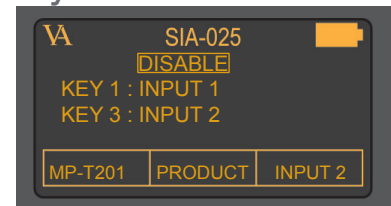

The display layout for the sub-menu: EDIT PRODUCT.

2. operation

 
Layout 1

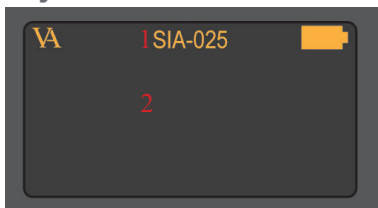

Display layout for sub-menus: LEAVE, FABRIK, ADD PRODUCT and DISPLAY.

1. The product that you are editing now
2. The sub-menu item that you can enter by pressing button 6. The display layout for the sub-menu: EDIT PRODUCT.

 Layout 2

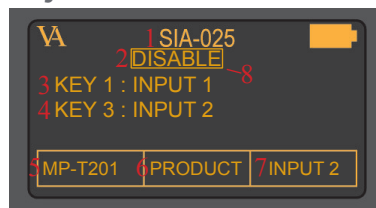


Display layout for sub-menu: EDIT PRODUCT.

1. The device that you are editing now.
2. Disable or enable the product. When you disable a product it will not be available when you scroll through the list of devices with button 2, item 1 on the display
3. Set the input in the predefined list under button 1, item 5, to the right number.
4. Set the input in the predefined list under button 3, item 7, to the right number.
5. Set hotkey 1 (button 1) to a product that you can choose from in the predefined list. The predefined list of products is installed standard on the RC-010. Scroll through this list with button 1. Change the product that you want to edit. Scroll through the list of products with button 2.
7. Set hotkey 2 (button 3) to a product that you can choose from in the predefined list. The predefined list of products is installed standard on the RC-010. Scroll through this list with button 3.
8. Selection indicator. Indicates which item on the display you have selected.

2. operation

 
Layout 1

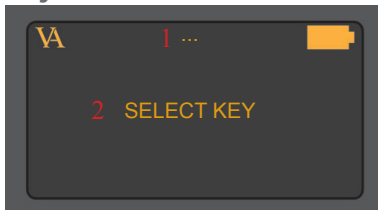

Sub-menu: PROGRAM KEY.

- 1 .The name of the product that you added in sub-menu item ADD PRODUCT.
- 2 .Select a key/button that you want to program.

 Layout 2

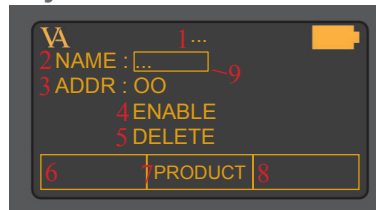

Sub-menu: SELECT KEY.

- 1 .The name of the product that you added in sub-menu item ADD PRODUCT.
- 2 .Select a name for the button that you selected. This name will appear in the display every time you push this button.
- 3 .Enter the RC 5 code that the remote has to send when this button is pressed.
- 4 .Enable / disable this button.
- 5 .Delete the settings for this button. Now you can reinstall this button.
- 6 .Hotkey 1. Enter this item by pressing button 1. Scroll through the list of predefined products with button 1. Select a product from the list with button 1. Change the product that you want to edit. Scroll through the list of products with button 2.
- 7 .Hotkey 2. Enter this item by pressing button 3. Scroll through the list of predefined products with button 3. Select a product from the list with button 3.
- 8 .Selection indicator. Indicates which item on the display you have selected.

2. operation

The menu structure

You can modify the settings of the RC-010. You do this by entering the menu. On the next page you can find a graphical reproduction of the menu. The sub-menus are indicated with a colour. **FABRIC**, **ADD PRODUCT**, **DISPLAY**, **EDIT PRODUCT** and **PROGRAM KEY**. On the next page you can find a description of the elements in the menu. In the Appendix you can find various examples of how to change the settings of the RC-010.

FABRIC

Restore the settings of the RC-010 to factory settings.

ADD PRODUCT

The RC-010 comes with a list installed of 12 predefined products. There is room for 14 products on this list. This means that it is possible to add 2 more products.

DISPLAY

The remote contains a motion sensor. The RC-010 enters a power down mode when the motion sensor has not registered movement for some time. You can awake the RC-010 movement, or by pressing a key. In this sub-menu, you can change the power down time delay, the time it takes before the RC-010 enters power down mode.

It is possible to set the delay to: OFF, 1,2,3,4,5 and 10 seconds.

When you select OFF, the remote shuts down as soon as you stop pressing a button. With OFF selected the motion sensor is deactivated and movement will not activate the RC-010.

EDIT PRODUCT

The products in the list of predefined products are fully programmed. You can disable or delete the products in the list or you can change the settings for buttons 1 and 3

(the hotkeys). When you add a product to the list then you have to program the buttons.

PROGRAM KEY

This sub-menu only becomes available when you add a product to the predefined product list. In this sub-menu you can enter the buttons RC5 code and give the button a name. You can give each button 2 functions. One function for pressing (release), and one function for press-and-hold (press).

2. operation

RC-010 Discription of the elements in the menu.

LEAVE MENU

Go back to normal mode.

FABRIC

Restore the settings of the RC-010 to default settings.

ADD PRODUCT

Add a product to the list of predefined products.

NAME

Give a name to the new product.

DISPLAY

Set the delay of the display.

EDIT PRODUCT

Change settings of the selected product.

DISABLE

Disable the selected product

ENABLE

Enable the selected product.

KEY (1 and 3)

Change the settings of the hotkeys (keys/buttons 1 and 3).

INPUT

Choose the input.

PROGRAM KEY

Program the different keys/ buttons.

PRESS/RELEASE

Program the button for press, and program the button for release.

CODE

Enter the RC 5 code belonging to the button.

TEXT

Give a discription to the button.

PRODUCT

Switch between products.



2. operation

RC-010 The menu structure

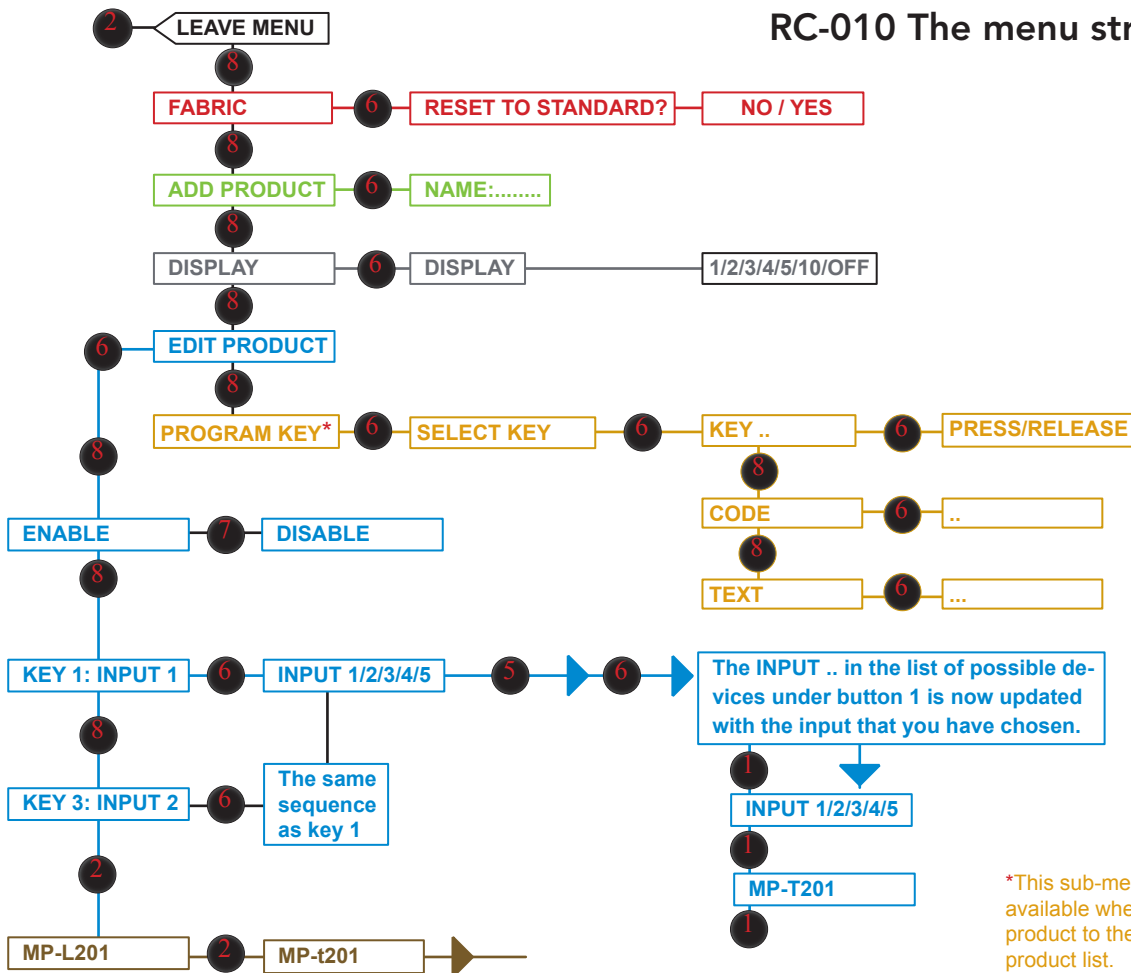 


Figure 9 The RC-010 Menu structure

*This sub-menu becomes available when you add a product to the predefined product list.

3. operation & service

Mains supply voltage

Any unit may be set for operation in 100V, 115V or 230V A.C. Units are shipped set for the mains supply voltage according to the destination. The voltage setting can be updated later by your dealer, if necessary.

Maintenance

Vitus Audio products are designed to run for many years without the need for regular maintenance. Should your RC-010 show signs of malfunction, please contact your dealer or Vitus Audio.

4. warranty

Warranty

Warranty Statement
(modified to fit Vitus Audio)

1. TERMS AND CONDITIONS

LIMITED WARRANTY

Vitus Audio warrants the product designated herein to be free of manufacturing defects in material and workmanship, subject to the conditions hereinafter set forth, for a period of three (3) years from the date of purchase by the original purchaser or no later than five (5) years from the date of shipment to the authorized Vitus Audio cooperating partner, whichever comes first, excepting any cosmetic damage to chassis parts. (See 6)

2. CONDITIONS

This Warranty is subject to the following conditions and limitations. The Warranty is void and inapplicable if the product has been used or handled other than in accordance with the instructions in the owner's

manual, abused, or misused, damaged by accident or neglect or in being transported, or the defect is due to the product being repaired or tampered with by anyone other than Vitus Audio or authorized Vitus Audio repair center. The product must be packed in its original box and returned to Vitus Audio or an authorized repair center by the customer at his or her sole expense. Vitus Audio will pay return freight of its choice.

IMPORTANT!

A returned product **MUST** be accompanied by a written description of the defect and a photocopy of the original purchase receipt. This receipt must clearly list model and serial number, date of purchase, the name and address of the purchaser and authorized dealer and the price paid by the purchaser. Vitus Audio reserves the right to modify the design of any product without obligation to purchasers of previously manufactured products and to change the prices or

specifications of any product without notice or obligation to any person.

3. REMEDY

In the event the above product fails to meet the above Warranty and the above conditions have been met, the purchaser's sole remedy under this Limited Warranty shall be to return the product to Vitus Audio or an authorized Vitus Audio repair center where the defect will be rectified without charge for parts and labor, except chassis parts. (See 6)

4. LIMITED TO ORIGINAL PURCHASER

This Warranty is for the sole benefit of the original purchaser of the covered product and shall not be transferred to a subsequent purchaser of the product.

5. DURATION OF WARRANTY

This Warranty expires on the third (3rd) year anniversary of the date of purchase or no later than the fifth (5th) anniversary of the date of shipment to the authorized Vitus Audio cooperating partner, whichever comes first.

4. warranty

6. CHASSIS

Damage or cosmetic defects are not warranted.

7. DEMONSTRATION EQUIPMENT

Equipment used by an authorized cooperating partner for demonstration purposes is warranted to be free of manufacturing defects in materials and workmanship for a period of three (3) years from the date of shipment to the authorized cooperating partner. After the first year, demo equipment needing warranty service must be packed in its original box and returned to Vitus Audio by the cooperating partner at his or hers sole expense. Vitus Audio will pay return freight of its choice. A returned product must be accompanied by a written description of the defect on a VITUS AUDIO RETURNED GOODS AUTHORIZATION form. Dealer-owned demonstration equipment sold at retail within three (3) years of date from shipment to the dealer is warranted to the first

retail customer to be free of manufacturing defects in materials and workmanship for the duration of the three (3) Year Limited Warranty remaining (as measured from the date of shipment of the equipment to the Vitus Audio partner. In the event warranty service is needed under these conditions, the owner of the equipment must provide a copy of his purchase receipt, fulfilling the requirements described under "2. Conditions" above. The product must be packed in its original box, and returned to Vitus Audio or an authorized Vitus Audio repair center by the customer at his or her sole expense. Vitus Audio will pay return freight of its choice.

8. MISCELLANEOUS

Any implied warranties relating to the above product shall be limited to the duration of this warranty. The warranty does not extend to any incidental or consequential costs or damages to the purchaser. Some countries do not allow limitation on how long an implied warranty lasts or

exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from country to country.

9. WARRANTOR

Inquiries regarding the above Limited Warranty may be sent to the following address:

AVA Group A/S
Sandgaardsvej 31, Birk
DK7400 Herning
Denmark
Att.: Customer Service

4. warranty

10. WARRANTY OUTSIDE DANMARK

Vitus Audio has authorized distribution in many countries in the world. In each country, the authorized importing retailer or distributor has accepted the responsibility for warranty of products sold by that retailer or distributor. Warranty service should normally be obtained from the importing retailer or distributor from whom purchased your product. In the unlikely event of service required beyond the capabilities of the importer, Vitus Audio will fulfill the conditions of the warranty. Such products must be returned at the owner's expense to the Vitus Audio factory, together with a photocopy of the bill of sale for that product, a detailed description of the problem, and any other information necessary return shipment. In many cases the retailer your purchased the product from, will handle this for you.

11. FURTHER INFORMATION

Should you have any further questions related to our warranty – please contact us at the following email: info@vitusaudio.com

5. specifications

RC-010 specifications

Remote

Data communication protocol.....RC5

BatteryLithium Ion 1000 mAh

AC/DC Adapter


Type.....FW74010/05 Switchmode

Input.....100 - 240 V~/ 50-60 Hz / 310 mA

Output.....5V / 2A

5. specifications

 RC-010 measurements

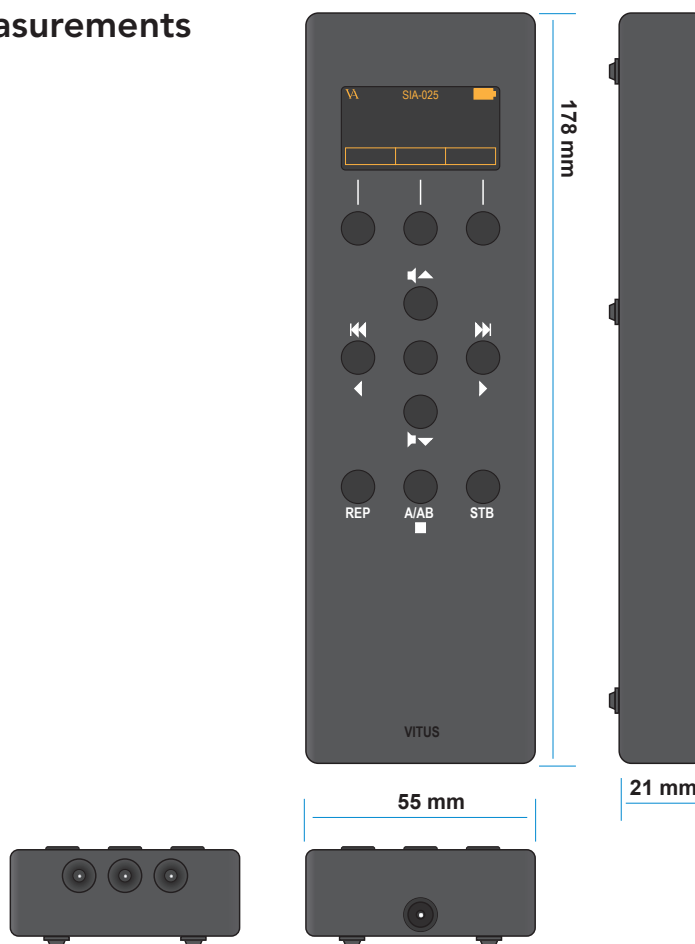

5. specifications



RC-010 The functions of the buttons

Signature

	SM-010	SS-101	SM-101
Button 1:	SCD-010	SCD-010	SCD-010
Button 2:	Product	Product	Product
Button 3:	SL-102		SL-102
Button 4:	Volume up	Volume up	Volume up
Button 5 release:		XLR	Input
Button 5 press:			
Button 6:		Mute	
Button 7 release:		RCA	Input
Button 7 press:			
Button 8:	Volume down	Volume down	Volume down
Button 9 release:			
Button 9 press:			
Button 10:	Change Class	Change Class	Change Class
Button 11:	Standby	Standby	Standby


5. specifications

RC-010 The functions of the buttons

Signature

	SCDO10	SIA-025	SL-010 / SL-102	SP-102	SS-050
Button 1:	Pause	SCD-010	SCD-010	SL-102	SCD-010
Button 2	Product	Product	Product	Product	Product
Button 3:	Mute	Input 2	SP-102	Output	
Button 4:	Volume up	Volume up	Volume up	Sens up	Volume up
Button 5 release:	Previous Track	Previous input	Previous input	Input	Previous input
Button 5 press:	Fast BackWard				
Button 6:	Play	Mute	Mute	Mute	Mute
Button 7 release:	Next Track	Next input	Next input	Input	Next input
Button 7 press:	Fast ForWard				
Button 8:	Volume down	Volume down	Volume down	Sens down	Volume down
Button 9 release:	Repeat				
Button 9 press:	Repeat Track				
Button 10:	Stop		Change Class	Output	
Button 11:	Standby	Standby	Standby	Standb	Standby

 5. specifications

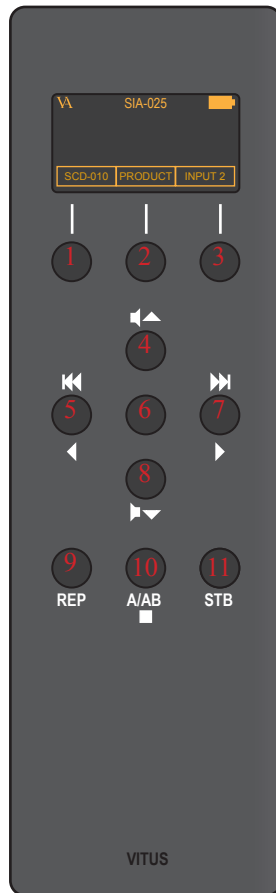

RC-010 The functions of the buttons.

Masterpiece

	MP-L2101	MP-P201	MP-L201	MP-T201	MP-M201
Button 1:	MP-T201	Load	Output	Pause	
Button 2	Product	Product	Product	Product	
Button 3:	MP-P201		Input 2 / SP-102	Mute	
Button 4:	Volume up	Sens up	Volume up		
Button 5 release:	Previous input	Input	Previous input	Previous Track	
Button 5 press:				Fast BackWard	
Button 6:	Mute	Mute	Mute	Play	
Button 7 release:	Next input	Input	Next input	Next Track	
Button 7 press:				Fast ForWard	
Button 8:	Volume down	Sens down	Volume down		
Button 9 release:				Repeat	
Button 9 press:				Repeat Track	
Button 10:	Power	Power		Stop	Change Class
Button 11:	Standby	Standby	Standby	Standby	Standby

5. specifications

The RC 5 codes for the remote.

Reference Decimal

RCD-100			
Address	20		
Standby	12	Goto Track 0	0
Change input	45	Goto Track 1	1
Vol up	16	Goto Track 2	2
Vol down	17	Goto Track 3	3
Next Track	32	Goto Track 4	4
Prev Track	33	Goto Track 5	5
Fast FW	52	Goto Track 6	6
Fast BW	50	Goto Track 7	7
Play	53	Goto Track 8	8
Stop	54	Goto Track 9	9
Pause	48		
Repeat	29		
Repeat Track	11		

Reference Hexadecimal

RCD-100			
Address	0x14	Goto Track 0	0x00
Standby	0x0C	Goto Track 1	0x01
Change input	0x2D	Goto Track 2	0x02
Vol up	0x10	Goto Track 3	0x03
Vol down	0x11	Goto Track 4	0x04
Next Track	0x20	Goto Track 5	0x05
Prev Track	0x21	Goto Track 6	0x06
Fast FW	0x34	Goto Track 7	0x07
Fast BW	0x32	Goto Track 8	0x08
Play	0x35	Goto Track 9	0x09
Stop	0x36		
Pause	0x30		
Repeat	0x1D		
Repeat Track	0x0B		

5. specifications

The RC 5 codes for the remote.

Signature Decimal

SIA-025		SS-101		SCD-010			
Address	63	Address	31	Address	20	Goto Track 0	0
Standby	63	Standby	22	Standby	12	Goto Track 1	1
Mute	58	Mute	24	Mute	19	Goto Track 2	2
Vol up	45	Vol up	23	Vol up	16	Goto Track 3	3
Vol down	52	Vol down	25	Vol down	17	Goto Track 4	4
Next input	32	In RCA	29	Next Track	32	Goto Track 5	5
Prev input	33	In XLR	28	Prev Track	33	Goto Track 6	6
Input 1	1	Class	20	Fast FW	52	Goto Track 7	7
Input 2	2			Fast BW	50	Goto Track 8	8
Input 3	3			Play	53	Goto Track 9	9
Input 4	4			Stop	54		
Input 5	5			Pause	48		
Class	36			Repeat	29		
				Repeat Track	11		

5. specifications

The RC 5 codes for the remote.

Signature Hexadecimal

SIA-025		SS-101		SCD-010			
Address	0x1E	Address	0x1F	Address	0x14	Goto Track 0	0x00
Standby	0x3F	Standby	0x16	Standby	0x0C	Goto Track 1	0x01
Mute	0x3A	Mute	0x18	Mute	0x13	Goto Track 2	0x02
Vol up	0x2D	Vol up	0x17	Vol up	0x10	Goto Track 3	0x03
Vol down	0x34	Vol down	0x19	Vol down	0x11	Goto Track 4	0x04
Next input	0x20	In RCA	0x1D	Next Track	0x20	Goto Track 5	0x05
Prev input	0x21	In XLR	0x1C	Prev Track	0x21	Goto Track 6	0x06
Input 1	0x01	Class	0x14	Fast FW	0x34	Goto Track 7	0x07
Input 2	0x02			Fast BW	0x32	Goto Track 8	0x08
Input 3	0x03			Play	0x35	Goto Track 9	0x09
Input 4	0x04			Stop	0x36		
Input 5	0x05			Pause	0x30		
Class	0x24			Repeat	0x1D		
				Repeat Track	0x0B		

5. specifications

The RC 5 codes for the remote.

Signature Decimal

SL-102		SM-101		SP-102	
Address	23	Address	31	Address	23
Standby	63	Standby	19	Standby	63
Mute	58	Class	17	Mute	17
Vol up	45	Input	16	Sens up	16
Vol down	52	Mute	24	Sens down	18
Next input	32			Input	13
Prev input	33			Output	53
Input 1	1			Load	19
Input 2	2				
Input 3	3				
Input 4	4				
Input 5	5				
Load	14				

5. specifications

The RC 5 codes for the remote.

Signature Hexadecimal

SL-102		SM-101		SP-102	
Address	0x17	Address	0x1F	Address	0x17
Standby	0x3F	Standby	0x13	Standby	0x3F
Mute	0x3A	Class	0x11	Mute	0x11
Vol up	0x2D	Input	0x10	Sens up	0x10
Vol down	0x34	Mute	0x18	Sens down	0x12
Next input	0x20			Input	0x0D
Prev input	0x21			Output	0x35
Input 1	0x01			Load	0x13
Input 2	0x02				
Input 3	0x03				
Input 4	0x04				
Input 5	0x05				
Load	0x0E				

5. specifications

The RC 5 codes for the remote.

Masterpiece Decimal

MP-P201		MP-L201		MP-D201		MP-T201		MP-M201	
Address	24	Address	22	Address	21	Address	20	Address	19
Standby	63	Standby	63	Standby	63	Standby	12	Standby	19
Mute	17	Mute	58	Mute	58	Next Track	32	Class	17
Sens up	16	Vol up	16	Vol up	45	Prev Track	33	Mute	24
Sens down	53	Vol down	53	Vol down	52	Fast FW	52		
Load	14	Next input	13	Next input	32	Fast BW	50		
Power	62	Prev input	11	Prev input	33	Play	53		
Input	11	Input 1	1	Output	53	Stop	54		
		Input 2	2	Input 1	1	Pause	48		
		Input 3	3	Input 2	2	Repeat	29		
		Input 4	4	Input 3	3	Repeat Track	11		
		Input 5	5	Input 4	4	Goto Track 0	0		
		Power	62	Input 5	5	Goto Track 1	1		
				Input 6	6	Goto Track 2	2		
				Input 7	7	Goto Track 3	3		
				Input 8	8	Goto Track 4	4		
				Input 9	9	Goto Track 5	5		
				Input 10	10	Goto Track 6	6		
				Input 11	11	Goto Track 7	7		
						Goto Track 8	8		
						Goto Track 9	9		

5. specifications

The RC 5 codes for the remote.

Masterpiece Hexadecimal

MP-P201		MP-L201		MP-D201		MP-T201		MP-M201	
Address	0x18	Address	0x16	Address	0x15	Address	0x14	Address	0x13
Standby	0x3F	Standby	0x3F	Standby	0x3F	Standby	0x0C	Standby	0x13
Mute	0x11	Mute	0x3A	Mute	0x3A	Next Track	0x20	Class	0x11
Sens up	0x10	Vol up	0x10	Vol up	0x2D	Prev Track	0x21	Mute	0x18
Sens down	0x35	Vol down	0x35	Vol down	0x34	Fast FW	0x34		
Load	0x0E	Next input	0x0D	Next input	0x20	Fast BW	0x32		
Power	0x3E	Prev input	0x0B	Prev input	0x21	Play	0x35		
Input	0x0B	Input 1	0x01	Output	0x35	Stop	0x36		
		Input 2	0x02	Input 1	0x01	Pause	0x30		
		Input 3	0x03	Input 2	0x02	Repeat	0x1D		
		Input 4	0x04	Input 3	0x03	Repeat Track	0x0B		
		Input 5	0x05	Input 4	0x04	Goto Track 0	0x00		
		Power	0x3E	Input 5	0x05	Goto Track 1	0x01		
				Input 6	0x06	Goto Track 2	0x02		
				Input 7	0x07	Goto Track 3	0x03		
				Input 8	0x08	Goto Track 4	0x04		
				Input 9	0x09	Goto Track 5	0x05		
				Input 10	0x0A	Goto Track 6	0x06		
				Input 11	0x0B	Goto Track 7	0x07		
						Goto Track 8	0x08		
						Goto Track 9	0x09		

6. examples operation

Example 1 Signature

 
Disabling products

In our example we have a SCD-010 and a SP-102 connected to a SIA-025.


We will show you how can disable all the other products. So that the remote only displays the products that you are using when you switch between products.




1. Press and hold button 2 for 3 seconds to enter menu mode.

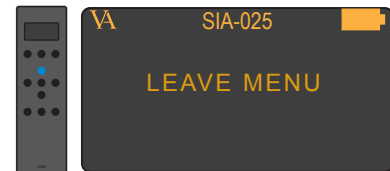

 
2. Navigate to the edit product sub-menu

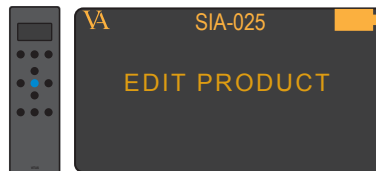

 
3. Enter the edit product sub-menu

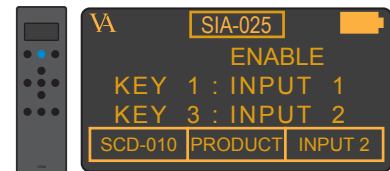

 4. Switch to the next product in the list (SS-050).

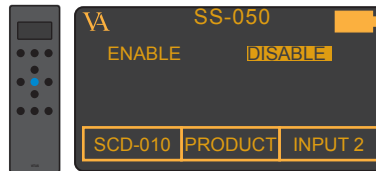

 5. Disable the SS-050.

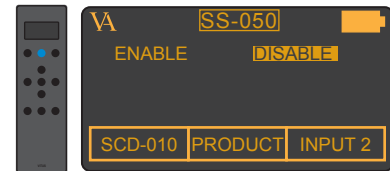

5. Switch to the next product (SS-101).



5. Disable the SS-101.

Continue doing this until you disabled all the products that you are not using .

6. examples operation

Example 2.1 Signature

Setting the hotkeys.

In our example we have a SCD-010 and a SP-102 connected to a SIA-025.

It is convenient to set the hotkeys so that you can easily switch between products.

 
The remote will automatically send the volume command to the product under hotkey 2. When you are in SCD-010 or SP-102 and you change the volume. Then the remote sends the volume command to the SIA-025.

We will show you how can set the hotkeys for all the products

In the following 7 steps we will show how you can set hotkey 2 to be SP-102.




1. Press and hold button 2 for 3 seconds to enter menu mode.

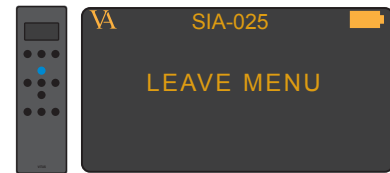


2. Navigate to the edit product sub-menu



 
3. Enter the edit product sub-menu

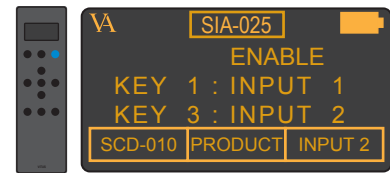

 4. Scroll to SL-102 in the list under hotkey 2

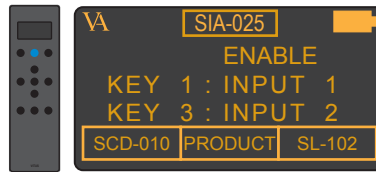

 4. Press select

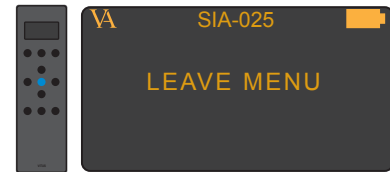

7. Leave the menu.



4. Hotkey 2 is now set to SL-102

6. examples operation

Example 2.2 Signature

Setting the hotkeys of the SCD-010.

 
In the following 8 steps we will show how you can set hotkey 1 to be SP-102 and hotkey 2 to be SIA-025.




1. Press and hold button 2 for 3 seconds to enter menu mode.




2. Navigate to the edit product sub-menu

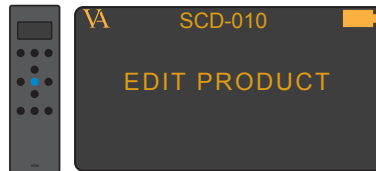

 
3. Enter the edit product sub-menu

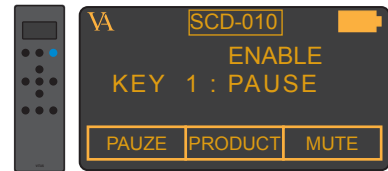

 4. Under hotkey 1 scroll to SP-102.

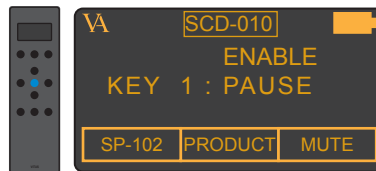

 5. Under hotkey 2 scroll to SIA-102.

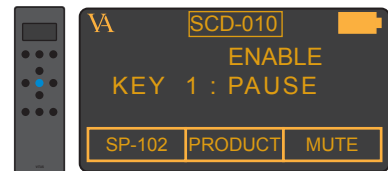

6. Press select



7. Leave the menu.




8. Hotkey 1 is now set to SP-102 hotkey 2 is now set to SIA-025.

6. examples operation


Example 2.3 Signature

Setting the hotkeys of the SP-102.

 In the following 8 steps we will show how you can set hotkey 1 to be SCD-010 and hotkey 2 to be SIA-025

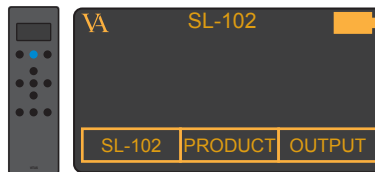

 1. Press and hold button 2 for 3 seconds to enter menu mode.

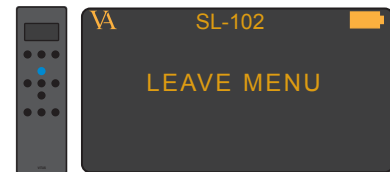


2. Navigate to the edit product sub-menu




3. Enter the edit product sub-menu



 
4. Scroll to SCD-010 in the list under hotkey 1.

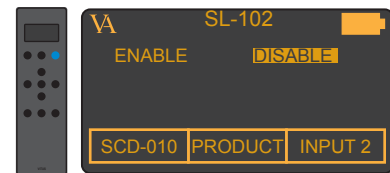

 
5. Scroll to SIA-025 in the list under hotkey 2

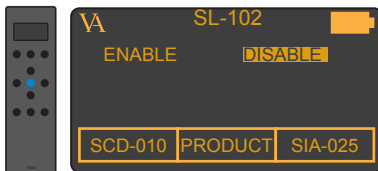

 6. Press Select.

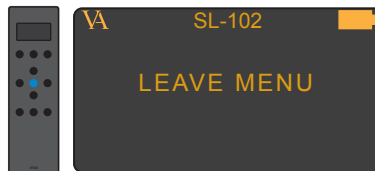

 7. Leave the menu.

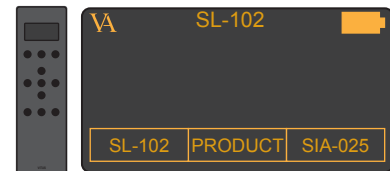


8. Hotkey 1 is now set to SCD-010, and hotkey.2 is set to SIA-025

6. examples operation

Example 3 Signature

Adding a product.

 In the following 7 steps we will show how you can add a product to the list of predefined products.

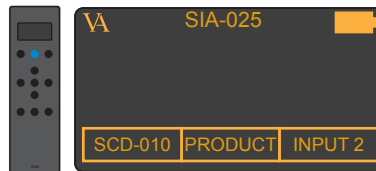


1. Press and hold button 2 for 3 seconds to enter menu mode.




2. Navigate to the add product sub-menu



 
3. Enter the add product sub-menu

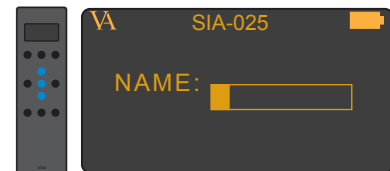

 4. Enter the name of the new product, for example CDPLAYER

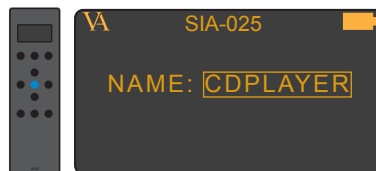

 5. Press select

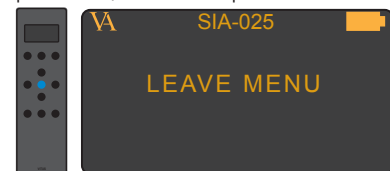

6. Leave the menu.



7. Now you can find the new product CDPLAYER in the list of products, when you switch between products.

The buttons of the new product CDPLAYER are not programmed. In the next example we will show how you can program the buttons of the new product CDPLAYER.

 
6. examples operation

Example 4 Signature

Programming the buttons of a new product.

You added a new product to the list of products in the RC-010. Now you want to program the buttons of the RC-010 so that you can operate the new product. In the following 9 steps we will show how you can program the buttons of the remote.


Important: you need the RC5 codes of the new product.

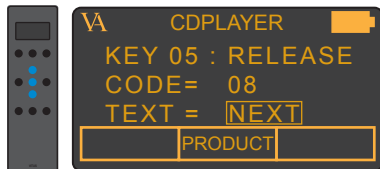


7. Give a name to the action that button 7 performs when you press it. We give it the name NEXT.



 
1. Press and hold button 2 for 3 seconds to enter menu mode.

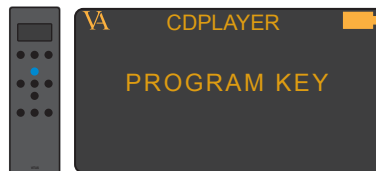

 
3. Enter the program key sub-menu.

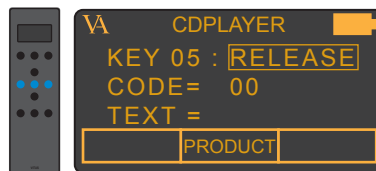

 
5. Select if the button has to perform its action when you press the button RELEASE or when you press and hold PRESS. We select RELEASE.

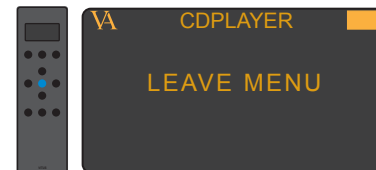

 
8. Leave the menu.

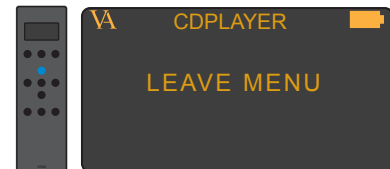

 2. Navigate to the program key sub-menu

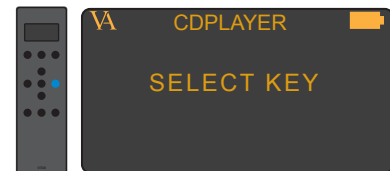

 4. Select the button that you want to program. We take button 7.

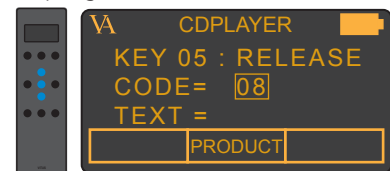

6. Fill in the RC5 code that belongs to the action that button 7 performs when you press it. We fill in 08.



 
9. Now the display shows NEXT when you press button 7.

6. examples operation

Example 5 Signature

Setting hotkey 1 to INPUT 3.

As a standard hotkey 1 (button 1) is set to SCD-010. In the following 7 steps we will show how you can change hotkey 1 from SCD-010 to INPUT 3.

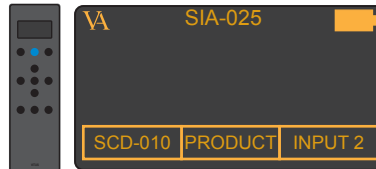


1. Press and hold button 2 for 3 seconds to enter menu mode.




2. Navigate to the edit product sub-menu



 
3. Enter the edit product sub-menu

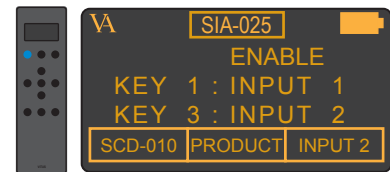

 
4. Scroll to INPUT 1 in the list under hotkey 2

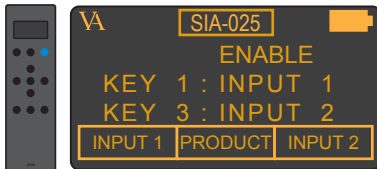

 
5. Scroll to INPUT 1 in the list under hotkey 2

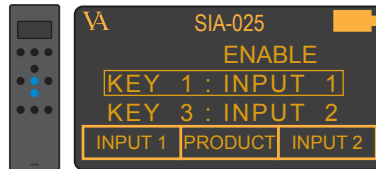

 
6. Select KEY 1.

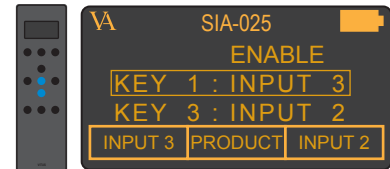

 7. Set KEY 1 to INPUT 3. The item under hotkey 1 has now automatically been updated to INPUT 3

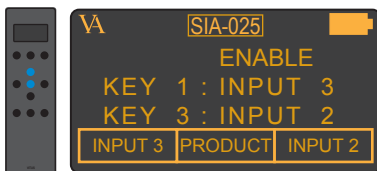

 8. Scroll to SIA-025 and press select.

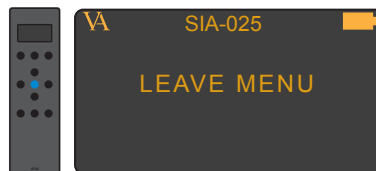

9. Leave the menu



 
10. The item under hotkey 1 is now INPUT 3.

6. examples operation

Example 6 Signature

Resetting the RC-010.

You can restore the settings of the RC-010. In the following steps we will show you how to do this.

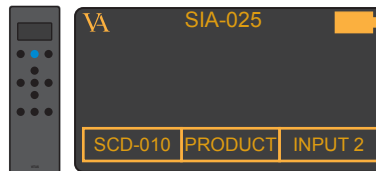


1. Press and hold button 2 for 3 seconds to enter menu mode.



2. Navigate to the FABRIC sub-menu




 2. Enter the FABRIC sub-menu

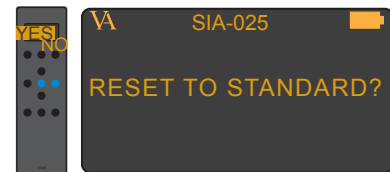

2. Restore the settings of the RC-010

 The settings of the RC-010 are now restored.

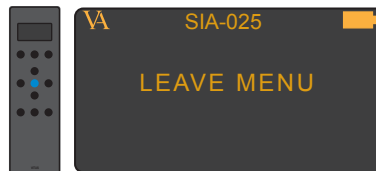


9. Leave the menu

6. examples operation


Example 7 Signature

Changing the delay from 5 to 10 seconds.

 
The delay of the display is as a standard set to 5 seconds. In the next 5 steps we will show how to set the delay to 10 seconds.

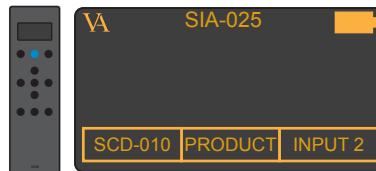

 
1. Press and hold button 2 for 3 seconds to enter menu mode.

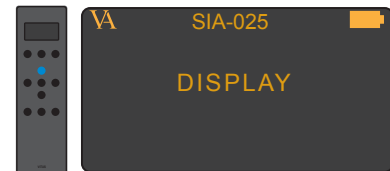

 
2. Navigate to the DISPLAY sub-menu

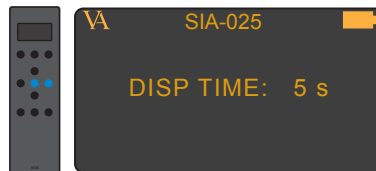

 3. Enter the DISPLAY sub-menu

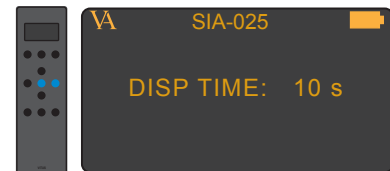

 4. Set the delay to 10 seconds.

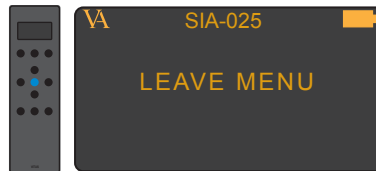

5. Leave the menu

The RC-010 will now power down after 10 seconds.

6. examples operation

6. examples operation

Examples Setup **Masterpiece**

 
We take our startingpoint in the following setup.

Vitus Audio products.

- MP-T201 (transport)
- MP-L201 (DAC)
- MP-P201 (Phono stage)
- MP-L201 (Line stage)
- MP-M201 (Mono Power Amplifier).

3.rd party products

- Pickup
- Computer

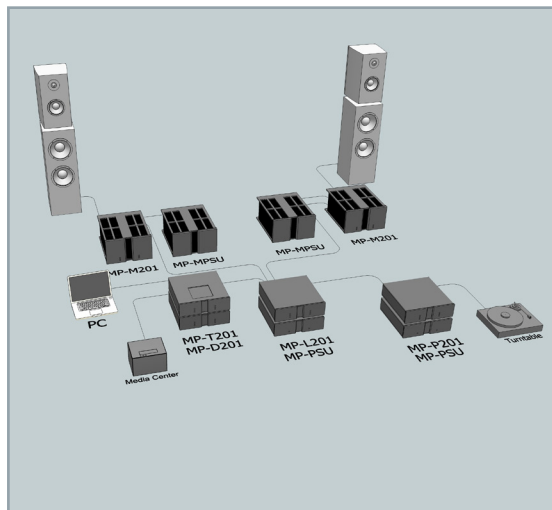


6. examples operation

Example 1 Masterpiece Disabling products


The RC-010 has all the Vitus Audio products installed as a standard.

It is convenient to disable (make invisible) the products that you are not going to use.

 We will show you how to disable these products. After disabling these products, the remote only displays the products that you are using.

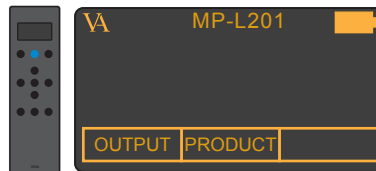

 
1. Press and hold button 2 for 3 seconds to enter menu mode.

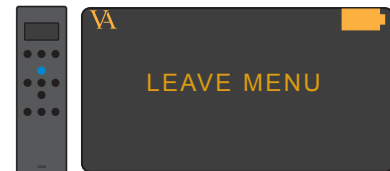


2. Navigate to the edit product sub-menu



 
3. Enter the edit product sub-menu

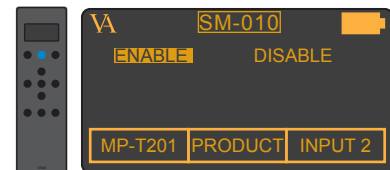

 
4. Switch to the first -not used-product in the list (MP-T201).

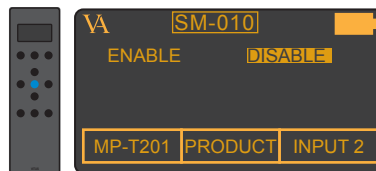

 5. Disable the MP-T201.

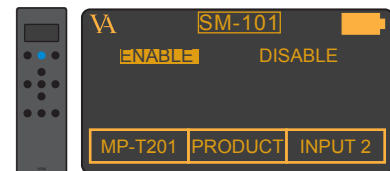

 6. Switch to the next product (SS-010).

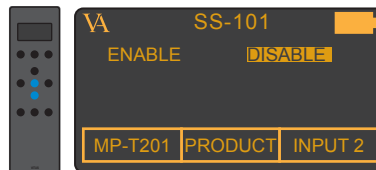

7. Disable the SS-101.

Continue doing this until you disabled all the products that you are not using .

6. examples operation

Example 2 Masterpiece Setting the hotkeys.

The RC-010 has two hotkeys. A hotkey is a button that can be programmed by the user.

It is convenient to set the hotkeys so that you can easily switch between products.

The remote automatically sends the volume command to the product assigned to hotkey 2.

If you want to control the volume with the MP-L201. Then hotkey 2 has to be assigned to a product without volume control (for example the MP-P201).

We will show you how can set the hotkeys for all the products.

Example 2.1 Setting the hotkeys with MP-M201 selected.

With the MP-M201 selected we will show you how to set hotkey 1 to be MP-T201 and hotkey 2 to be MP-L201.



1. Press and hold button 2 for 3 seconds to enter menu mode.



2. Navigate to the edit product sub-menu



 
3. Enter the edit product sub-menu



4. Scroll to MP-T201 in the list under hotkey 1 and scroll to MP-L201 in the list under hotkey 2



5. Press select

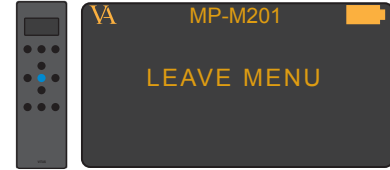

6. Leave the menu.



7. Hotkey 1 is now set to MP-T201 and hotkey 2 is set to MP-L201.

6. examples operation

Example 2.2 Masterpiece Setting the hotkeys with MP-T201 selected.

With the MP-T201 selected, we will show how you can set hotkey 1 to be MP-L201 and hotkey 2 to be MP-L201.



 
1. Press and hold button 2 for 3 seconds to enter menu mode.



2. Navigate to the edit product sub-menu




3. Enter the edit product sub-menu

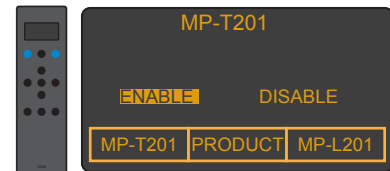


4. Scroll to MP-L201 in the list under hotkey 1 and scroll to MP-L201 in the list under hotkey 2



 5. Press select

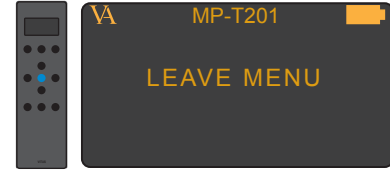

 6. Leave the menu.

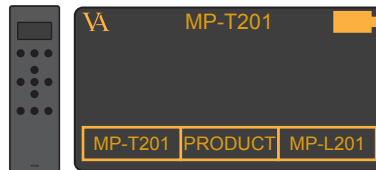

7. Hotkey 1 is now set to MP-L201 and hotkey 2 is set to MP-L201.

6. examples operation

Example 2.3 Masterpiece Setting the hotkeys with MP-L201 selected.

With the MP-T201 selected, we will show how you can set hotkey 1 to be MP-T201 and hotkey 2 to be MP-L201.



1. Press and hold button 2 for 3 seconds to enter menu mode.



2. Navigate to the edit product sub-menu



3. Enter the edit product sub-menu



4. Scroll to MP-T201 in the list under hotkey 1 and scroll to MP-L201 in the list under hotkey 2



5. Press select



6. Leave the menu.



7. Hotkey 1 is now set to MP-T201 and hotkey 2 is set to MP-L201.

6. examples operation

Example 2.4 Masterpiece Setting the hotkeys with MP-P201 selected.

With the MP-P201 selected, we will show how you can set hotkey 2 to be MP-L201.



 
1. Press and hold button 2 for 3 seconds to enter menu mode.



2. Navigate to the edit product sub-menu



3. Enter the edit product sub-menu

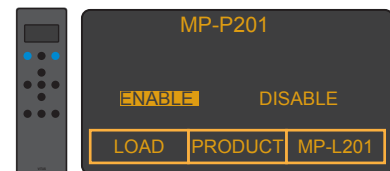

4. We leave hotkey 1 as it is and scroll to MP-L201 in the list under hotkey 2



5. Press select



6. Leave the menu.



7. Hotkey 2 is set to MP-L201.

6. examples operation

Example 2.5 Masterpiece Setting the hotkeys with MP-L201 selected.

With the MP-L201 selected, we will show how you can set hotkey 1 to be MP-T201 and hotkey 2 to be MP-P201.



1. Press and hold button 2 for 3 seconds to enter menu mode.



2. Navigate to the edit product sub-menu



3. Enter the edit product sub-menu



4. Scroll to MP-DT01 in the list under hotkey 1 and scroll to MP-P201 in the list under hotkey 2



5. Press select



6. Leave the menu.



7. Hotkey 1 is now set to MP-T201 and hotkey 2 is set to MP-P201.

6. examples operation

Example 3 Masterpiece

Adding a product.

The RC-010 has all the Vitus Audio products installed as a standard. The RC-010 can however be used with all the products that are controlled with the RC 5 protocol.

In the following 7 steps we will show how you can add a product to the list of predefined products.



1. Press and hold button 2 for 3 seconds to enter menu mode.



2. Navigate to the add product sub-menu



 
3. Enter the add product sub-menu



4. Enter the name of the new product, for example CDPLAYER



5. Press select

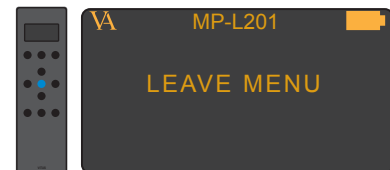

6. Leave the menu.



7. Now you can find the new product CDPLAYER in the list of products, when you switch between products.

In the next example we will show how you can program the buttons of the new product CDPLAYER.

 
6. examples operation

Example 4 Masterpiece

Programming the buttons of a new product.

You added a new product (CDPLAYER) to the list of products in the RC-010. Now you want to program the buttons of the RC-010 so that you can operate the new product. In the following 9 steps we will show how you can program the buttons of the remote.


Important: you need the RC5 codes of the new product.

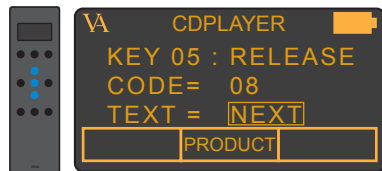


7. Give a name to the action that button 7 performs when you press it. We give it the name NEXT.



 
1. Press and hold button 2 for 3 seconds to enter menu mode.

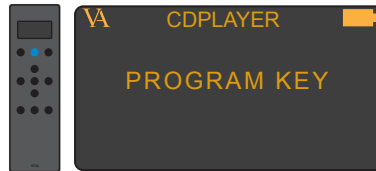

 
3. Enter the program key sub-menu.

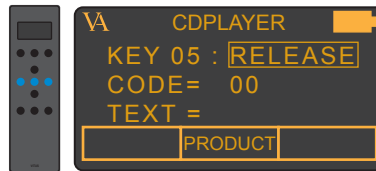

 
5. Select if the button has to perform its action when you press the button RELEASE or when you press and hold PRESS. We select RELEASE.

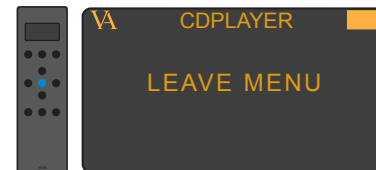

 
8. Leave the menu.

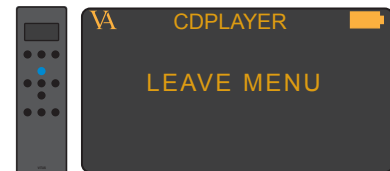

 2. Navigate to the program key sub-menu

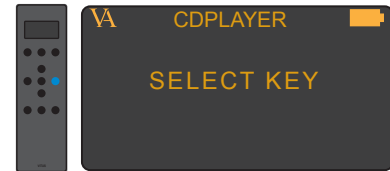

 4. Select the button that you want to program. We take button 7.

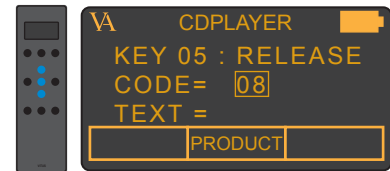

6. Fill in the RC5 code that belongs to the action that button 7 performs when you press it. We fill in 08.



9. Now the display shows NEXT when you press button 7.

6. examples operation

Example 5 Masterpiece

Setting hotkey 1 to INPUT 3.

Only applies to MP-L201

As a standard hotkey 1 (button1) is set to MP-T201. In the following steps we will show how you can change hotkey 1 from MP-T201 to INPUT 3.



 
1. Press and hold button 2 for 3 seconds to enter menu mode.




2. Navigate to the edit product sub-menu




3. Enter the edit product sub-menu

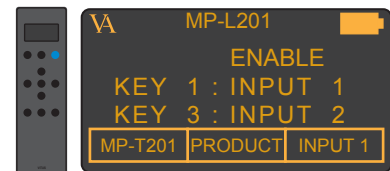

 
4. Scroll to INPUT 1 in the list under hotkey 1

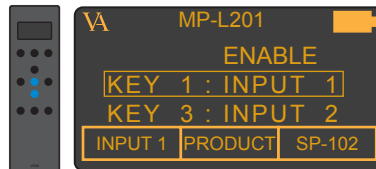

 5. Select KEY 1.

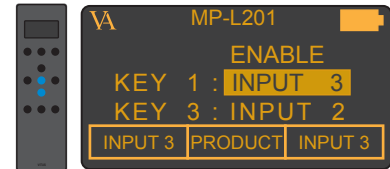

 
6. Set KEY 1 to INPUT 3. The item under hotkey 1 has now automatically been updated to INPUT 3

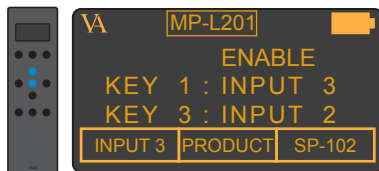

7. Select MP-L201 and press select.



 8. Leave the menu

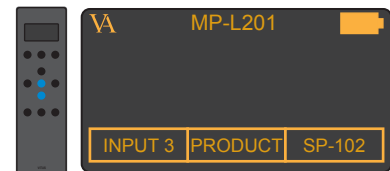

9. The item under hotkey 1 is now set to INPUT 3.

6. examples operation

Example 6 Masterpiece

Resetting the RC-010.

You can restore the settings of the RC-010. In the following steps we will show you how to do this.



1. Press and hold button 2 for 3 seconds to enter menu mode.



2. Navigate to the FABRIC sub-menu



 
2. Enter the FABRIC sub-menu



2. Restore the settings of the RC-010



9. Leave the menu

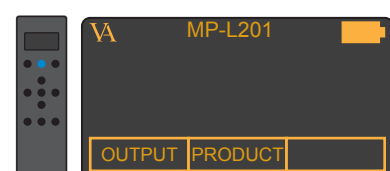

10. The settings of the RC-010 are now restored.

6. examples operation

 
Example 7 Masterpiece

Changing the delay from 5 to 10 seconds.

The delay of the display is as a standard set to 5 seconds. In the next 5 steps we will show how to set the delay to 10 seconds.




1. Press and hold button 2 for 3 seconds to enter menu mode.

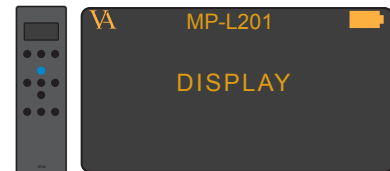

2. Navigate to the DISPLAY sub-menu



 3. Enter the DISPLAY sub-menu

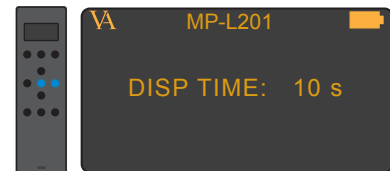

4. Set the delay to 10 seconds.



5. Leave the menu

The RC-010 will now power down after 10 seconds.

7. pictures

RC-010 Picture



Picture 2 RC-010 Front

Handcrafted  in Denmark

v i t u s **VA** a u d i o

AVA Group A/S (Vitus Audio), Sandgaardsvej 31, DK-7400 Herning, Denmark, Phone: +45 9626 8046, Fax: +45 9626 8045

e-mail: info@vitusaudio.com, web site: www.vitusaudio.com

design © audiography 2010